
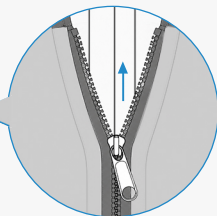


MESH SIDEWALL INSTALLATION

Easy 3-Step Installation



1. Align the Zipper Corners

- Install the mesh sidewall inside the tent frame with the tent legs outside the mesh.
- Align all ④ zipper corners with the tent legs.

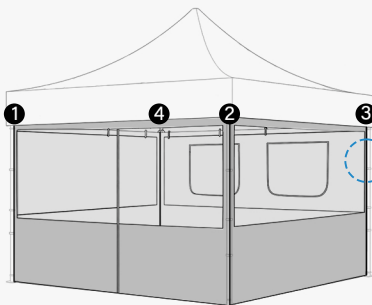


2. Attach the Hooks to the Lower Cross Bars

- Attach all hooks securely to the lower cross bars.
- Adjust the hook straps as needed to keep the top edge of the mesh sidewall level with the tent canopy.

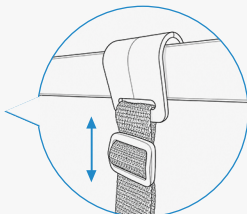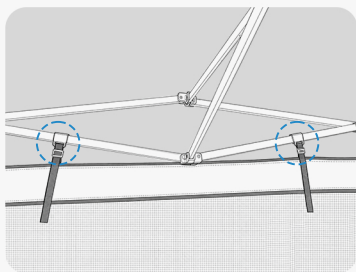

3. Fasten the Straps Around the Legs

- Wrap the strap buckles around each tent leg.

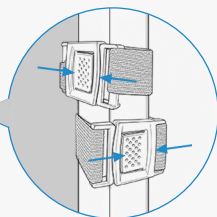

Tips

- ✓ Install the mesh sidewall inside the tent frame. The tent legs should remain outside the mesh sidewall.
- ✓ Do not fully tighten the straps until all hooks and zipper corners are properly aligned.
- ✓ For the best fit, set the tent legs to the second hole position (middle height setting) after installation.
- ✓ Each mesh sidewall is interchangeable and can be installed on any side of the tent.