
INSTRUCTION 3ft SEG Fabric Stand Display

STEPS

Hardware in Box

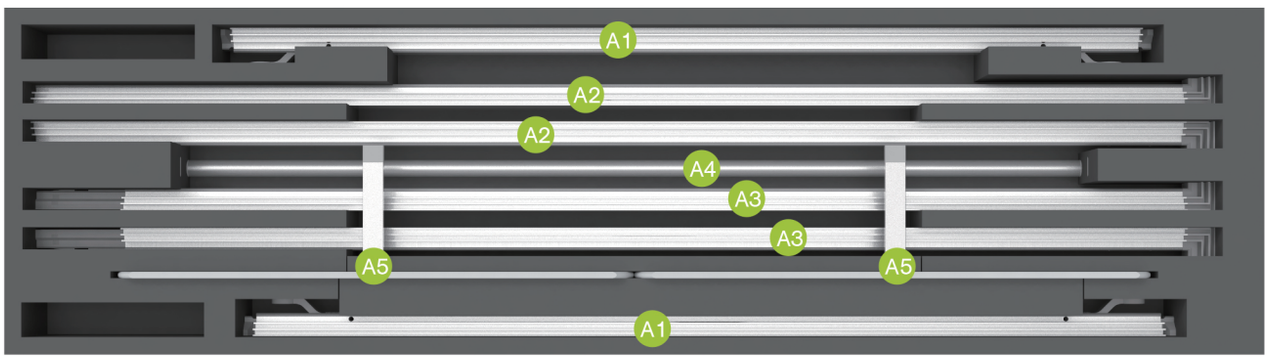

Parts with Labeling Codes



A1 Horizontal Profile



A2 Vertical Profile Bottom



A3 Vertical Profile Top




A4 Support Rod



A5 Foot

Parts with Labeling Codes on Frame

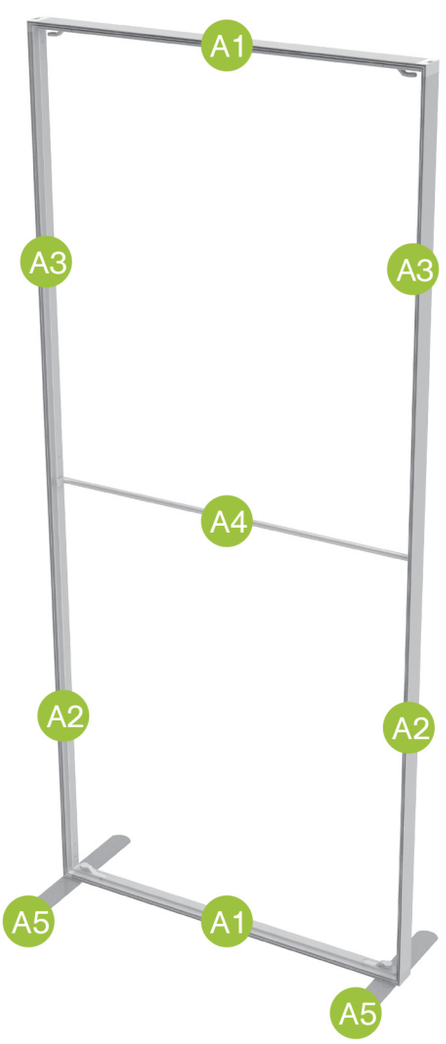


INSTRUCTION 3ft SEG Fabric Stand Display

STEPS


STEP 01


Interconnect A2 & A3 vertical profiles.

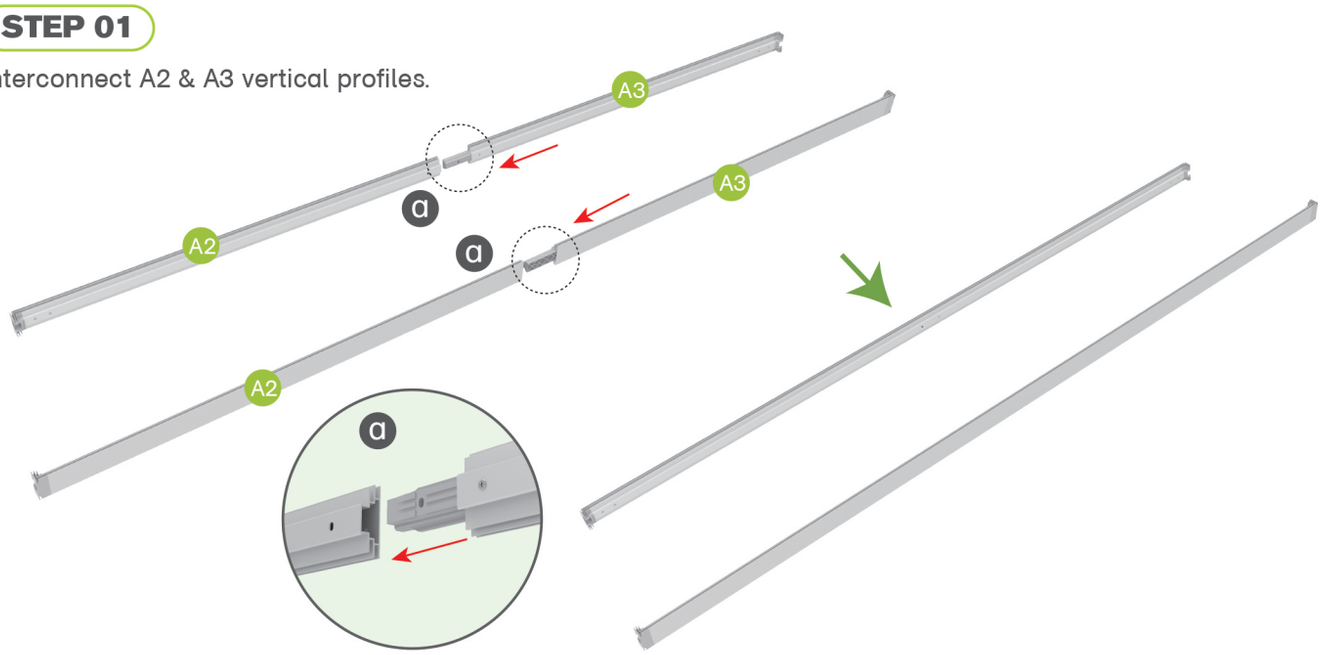

STEP 02

Interconnect horizontal & vertical profiles by pulling up buckle to insert into & pressing down to lock.

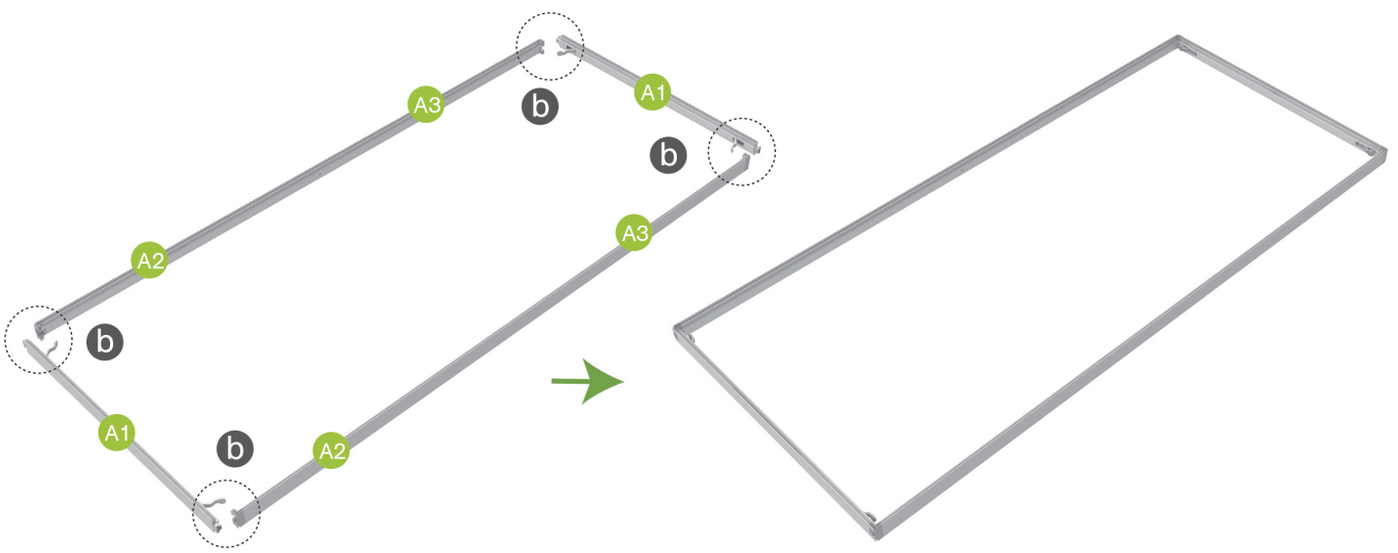


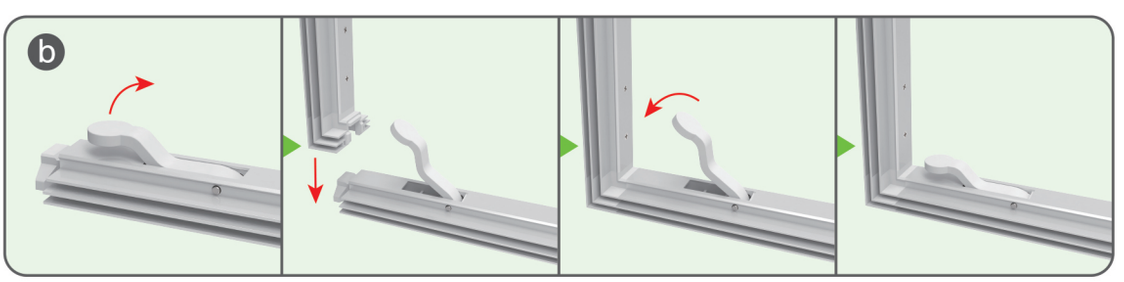

STEPS


STEP 03


Align side part's holes to install support rod.

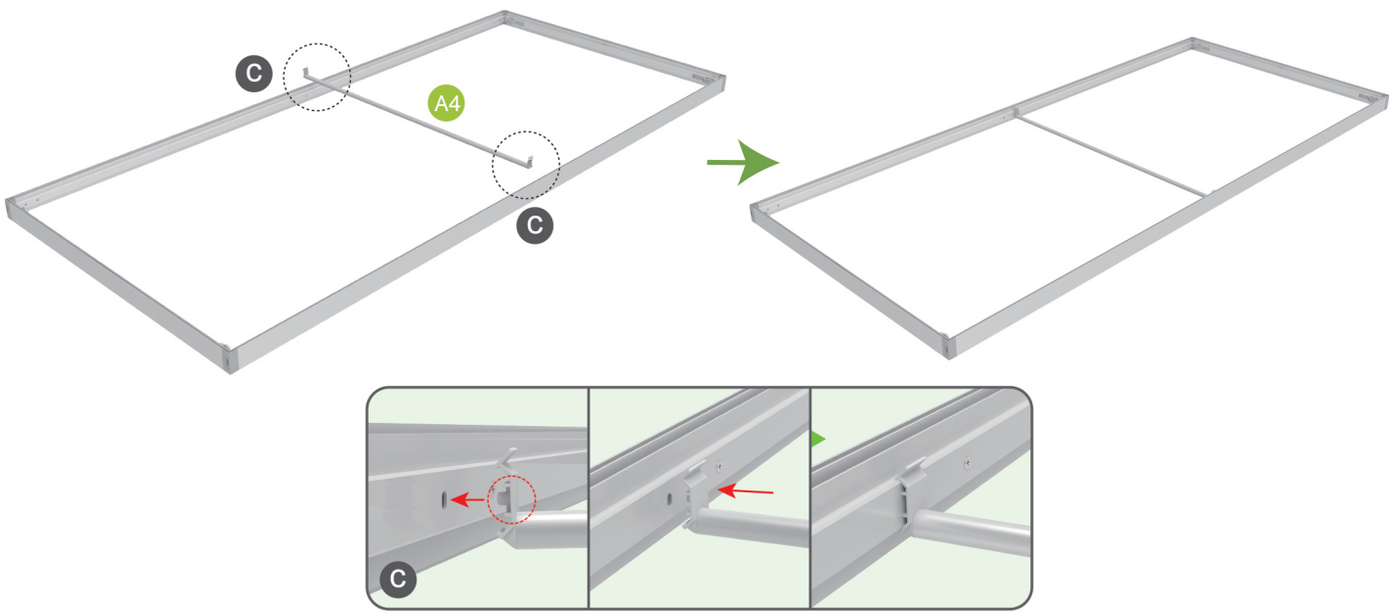


STEP 04

Insert frame onto feet.

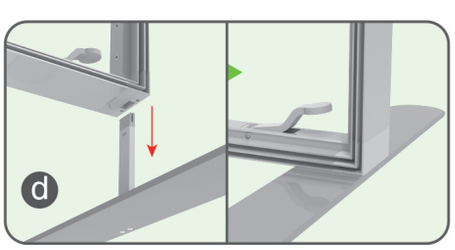

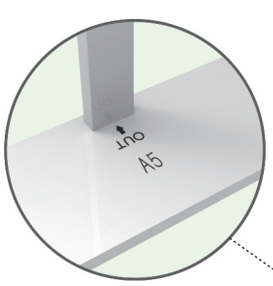

Align Feet's Outside with Frame's Outside

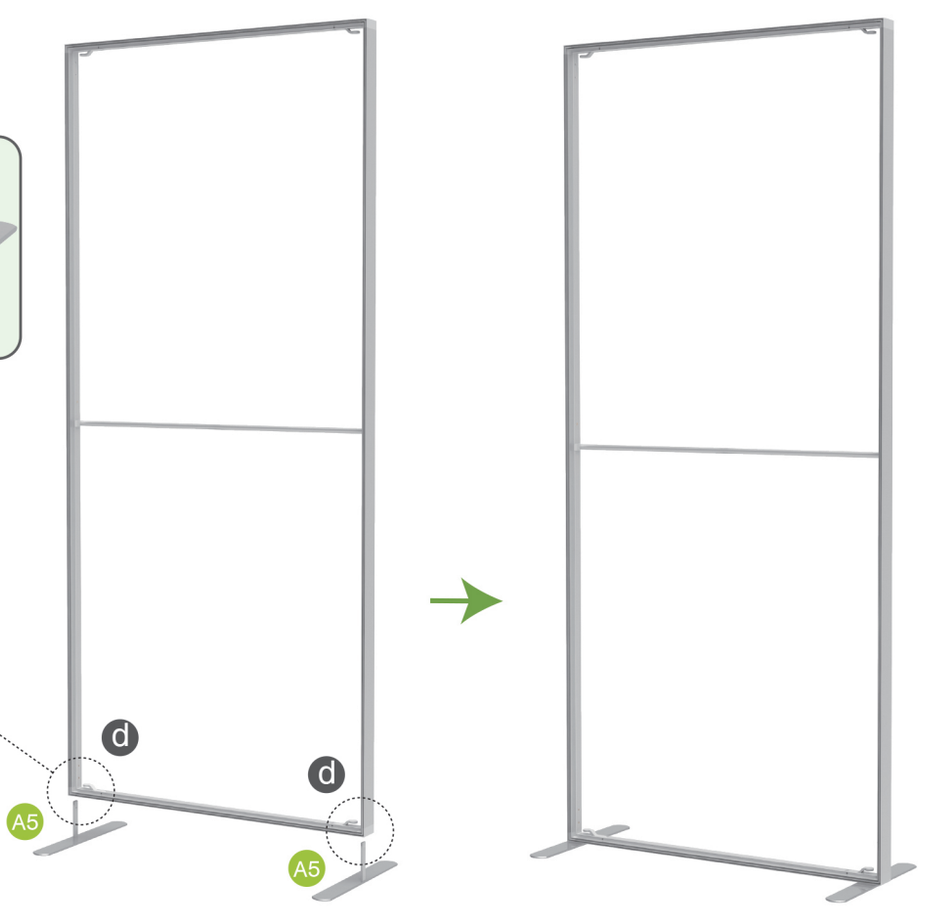

STEPS

STEP 05

Insert silicone edge graphic into channels from corners. (Same Steps for Double Sides)

